

## **Cordless Hand Blender**

### **Art. No. 50959 User Manual**

#### **IMPORTANT SAFEGUARDS**

When using any electrical appliance, especially when children are present, basic safety precautions should always be taken to reduce the risk of fire, electric shock and / or injury, including the following:

**WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.**

1. This appliance is intended for household use only and is not for commercial or outdoor use.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge— unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Do not operate in the presence of explosive and/or flammable fumes.
4. Always inspect the appliance and appliance accessories before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Customer Service Line.
5. Care should be taken when handling the attachments, during use and cleaning.
6. Make sure the appliance is off and the motor / blade / attachment has stopped completely before putting on or taking off attachments, and before cleaning.
7. To protect against electric shock, never submerge any portion of the handle or motor in liquids. Only the shaft, where blades are interchanged, have been designed for submersion in liquids. If handle falls into liquid, remove immediately. Carefully remove, clean and dry hand blender thoroughly before continuing.
8. **WARNING:** Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from attachments during operation to reduce risk of injury to persons, and/or damage to the appliance. A spatula may be used, but only when the unit is not operating.
9. When mixing liquids, use a tall container or mix small quantities at a time to reduce spillage.
10. Use extra care when working with hot liquids to avoid splattering.
11. Do not overload the blending cup. Observe the maximum fill line.
12. Do not run the blender empty – this will damage the motor.
13. Illuminated lights indicate unit is ready to operate. Avoid any contact with blades or movable parts.
14. Once blender is unlocked and/or powered on, avoid any contact with blades or movable parts.
15. To safely turn hand blender off release the Power button.
16. To prevent unintentional starting, never press the Auto Lock/Unlock button on the power handle while pressing the power button.
17. Blades are very SHARP. Handle carefully. Always handle blades cutting edge away from you.
18. This product contains a Lithium rechargeable battery pack that is not to be removed from the appliance for

charging. The batteries in this appliance are non-replaceable.

19. To charge the battery pack, please use the USB cord provided with the USB power adapter specified by the manufacturer.

20. To avoid damage to the USB cord, do not let cord meet any hot surfaces including a stovetop.

21. The USB power adapter and USB cable should be plugged into an electrical outlet away from sink or hot surface.

22. Do not use an extension cord. Plug USB power adapter directly into an electrical outlet.

23. Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperature above 130°C may cause an explosion.

24. Recommended ambient charging temperature 10°C - 40°C.

25. Recommended storage temperature 10°C - 40°C.


26. DO NOT leave outdoors.

### UNPACKING INSTRUCTIONS

Place the package containing the hand blender on a sturdy surface. Unpack the hand blender from its box by removing the power handle, blending shaft, whisk, chopper and beaker. Remove all support materials from the box. Save packaging for possible repacking of the unit.

NOTE: All blades are extremely sharp. Be careful when removing and/or handling.

### FUTURES AND COMPONENTS:

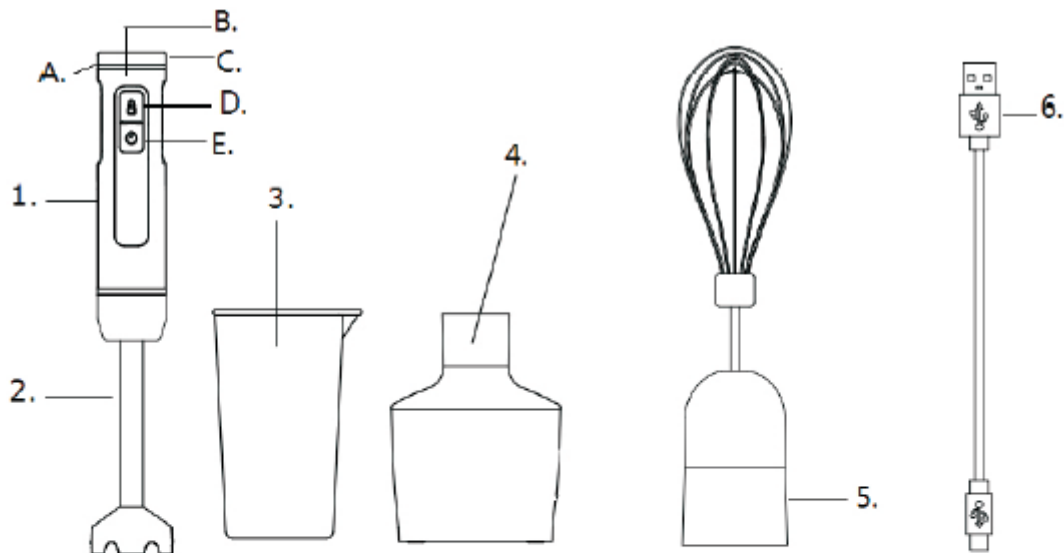

#### 1. Power Handle

No cord! Operates on a rechargeable Lithium-ion battery pack (two rechargeable 3.7V LI-ion batteries), with power button within easy reach. Shaped like as a stirring utensil for comfortable control.

A. Indicator Light for displaying working or charging status.

Light Indication:	Instruction:
Blue light	Safety unlock, Battery fully charged
Red and Blue lights	20% battery power left, it's better to recharge the battery
Red light	Battery empty, Battery needs to be recharged
Red light flashing 3 times	Overload, Please reduce the food and restart it.

B. USB Type-C Charging Port

C. Blue Speed Indicators. Eight bars light up to indicate low to high speed selection.

D. Auto Lock / Unlock Button.

E. Power Button. Press and hold before or right after pushing Auto Lock / Unlock button.

**NOTE: Operation stops instantly and locks when Power button is released.**

## 2. Blending Shaft

Detachable shaft with stainless steel blade and blade guard snaps on and off power handle for easy operation and cleanup.

## 3. Mixing / Measuring Beaker

Beaker is marked for liters and fluidounce for convenient measuring. Use for drinks, shakes, salad dressings, etc. Designed for easy gripping and drip-free pouring.

## 4. Chopper Attachment

Chopper attachment snaps into the power handle housing. It is great to chop herbs, nuts, cheeses and more.

## 5. Whisk Attachment

Whisk attachment snaps into the power handle housing. This attachment is great for whipping cream, egg whites and other delectable treats.

## 6. USB Type-C charging cable

## INSTRUCTIONS FOR USE

Before using the hand blender for the first time, we recommend that you wipe the unit with a clean, damp cloth to remove any dirt or dust. Dry it thoroughly with a soft absorbent cloth. Carefully clean all the attachments (except for the charging base) in warm soapy water.

**Note:** Do not use abrasive cleaners, hard implements or a scourer. Take care when handling the blending shaft, as the blades are very sharp.

## CHARGING THE HAND BLENDER

The batteries in your hand blender have not been fully charged. Before the first use of this appliance, the batteries must be charged until the RED battery indicator light turns to BLUE. With a full charge, your hand blender will run for approximately 20 minutes, depending on load. Your hand blender will be fully charged in approximately 4 hours.

**N.B.** To charge the main unit, insert the Micro USB end of charging lead into the charging port at the back of

the main unit. Plug the USB end directly into the adapter plug and then into a mains supply outlet.

The blender cannot be used while it is in charging.

**NOTE:** Do not leave your appliance uncharged for an extended period of time, as it will affect the life of the rechargeable battery.

## ASSEMBLY

### 1. Blending Attachment

Align the Power Handle housing with the Blending Shaft and twist the blending shaft anti-clockwise until you hear it click into place.



### 2. Whisk Attachment

Align the Power Handle with the assembled Whisk Attachment and twist the whisk attachment anti-clockwise until you hear it click into place.


**NOTE:** whisk and gearbox are detachable from one another. Ensure the whisk is fitted into the gearbox by pushing the two pieces together tightly with grooves aligned and you hear a Click sound.



### 3. Chopper Attachment

Align the Power Handle with the assembled Chopper Attachment and twist the power handle clockwise until you hear it click into place.


**N.B.** The lid needs to be on the mini chopper before the power handle is attached.

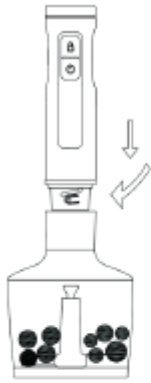

### OPERATION - TURNING THE HAND BLENDER ON/OFF

To operate the hand blender, press and hold the Auto Lock/Unlock Button until the Blue lights illuminate, then press and hold Power Button to start the appliance. Do not hold Power button down for more than 1 minute at a time. To turn off the hand blender off, release the Power button.

There are Eight speeds for selection. Turn the silver speed adjustment dial clockwise to from low to high.

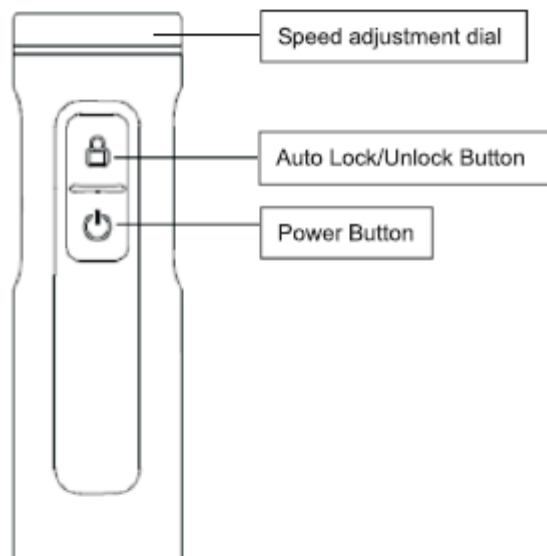

### NOTE:

1. The appliance has a safety feature and will automatically lock again after the power button is released for more than 4 seconds.
2. To Pulse, press and hold the Auto Lock/Unlock button until Blue lights illuminate, then press and hold the Power button. Repeatedly press and release the Power button until ingredients reach desired consistency.
3. The product comes with an overload protection feature. If the unit stops unexpectedly, it will cut out and the battery power indication light will flash RED 3 times. You can reactivate by pressing the Auto Lock/Unlock button and the Power button.

## HINTS & TIPS

- To avoid splashing, insert the Hand Blender into the mixture before activating, and release the Power button before removing the Hand Blender out of the mixture.
- Use a gentle up and down motion, whilst ensuring the protective blade guard on the blending shaft remains fully submerged in the liquid to avoid splatter (tilt the pan or bowl away from you to create a deeper area for blending). It is the best way to blend and incorporate ingredients uniformly.
- When blending a small volume of liquid, tilt the container slightly, to submerge the blade guard, for best results.
- When blending in a non-stick pan/container, be careful not to scratch the coating with the hand blender.
- When blending in the beaker, put firmer ingredients in first, then soft ingredients. Finish with any liquid you want to add, unless recipe instructs otherwise.
- Liquid should not come closer than 3cms of where the shaft attaches to the power handle.
- Do not let hand blender stand in a hot pot on stove while not in use.
- Do not attempt to blend fruit pits, bones or other hard materials, as these are likely to damage the blades.
- Do not fill mixing containers too full. The level of mixture will rise when blending and can overflow.
- To whip air into a mixture, always hold the blade just under the surface.

## CLEANING & MAINTENANCE

Always clean the appliance thoroughly after use.

**Main Unit:** Ensure any attachment has been removed from the unit. Clean the main unit with a sponge or damp cloth only. Do not use abrasive cleaners that could scratch the surface.

**Blending Shaft:** Release the attachment from the main unit. To clean the blending shaft, wash by hand in hot water using a mild detergent.

**WARNING:** Be mindful of the fixed razor-sharp edges of the blades, they are very sharp and should be handled carefully to avoid injury. The blending shaft is **NOT** dishwasher safe.

**Whisk Attachment:** Release the fully assembled whisk attachment from the main unit. To clean the Whisk attachment, detach the metal whisk from the gearbox by pulling two pieces apart. To clean the gearbox, simply wipe with a damp cloth. To clean the metal whisk, wash with warm, soapy water or place on the top rack of the dishwasher. **Do not submerge the gearbox in water or any other liquids.**

**Chopper:** Remove the attachment from the main unit. To remove the lid from the bowl, twist anti-clockwise to release and then lift it. To clean the lid, simply wipe with a damp cloth. To clean the blade and bowl, wash with warm soapy water. Bowl and blade is dishwasher safe but lid is **NOT**.

**WARNING:** Take care when cleaning the blades as they are very sharp and should be handled with care, to avoid injury.

**Beaker:** To clean the blending jug, wash with warm soapy water or place on the top rack of the dishwasher.



**Technical Parameters:**

- Power Source: battery powered
- Battery: 2pcs 3.7V 2000mAh lithium-ion rechargeable battery, battery weight about 112g/pc
- Rated Voltage: DC 7.4V
- Charging interface: Type-C (USB charging cable is provided)
- Input: 5V/1A
- Wattage: 200W
- Number of Speeds: 8
- Charging time: about 4 hours
- Working time: about 20 minutes depending on load

**ATTENTION!!!**

The returns will be impossible if products were damaged because of incorrect use.

**DISPOSAL:**

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call

in Germany	02173-9246888*	or <a href="mailto:info@eurotops.de">info@eurotops.de</a>
in Austria	0800 321 768**	or <a href="mailto:info@eurotops.at">info@eurotops.at</a>
in Switzerland	071 274 68 06	or <a href="mailto:info@eurotops.ch">info@eurotops.ch</a>
in the Netherlands	020 262 195 8	or <a href="mailto:info@eurotops.nl">info@eurotops.nl</a>
in France	037-28 44 400	or <a href="mailto:info@eurotops.fr">info@eurotops.fr</a>
in Belgium	02-27 33 300	or <a href="mailto:info@eurotops.be">info@eurotops.be</a>

\* At local rate from the German fixed network

\*\* Free of charge within Austria

A possible return of products should be addressed to the return address stated on your invoice.

© 01.08.2023 Only for private use and for the use described.